

Lightweight breaker.

Height(mm)	Width(mm)	Length(m)	Hand arm	Noise(db)
			vibration	
			2.5m/s2	92
	Height(mm)	Height(mm) Width(mm)	Height(mm) Width(mm) Length(m)	vibration













EACH TIME BEFORE USING MACHINE

This machine should only ever be used by a trained and/or competent person.

Check that the machine has in no way been damaged in transit or whilst on site. If you have any questions or doubts, please contact the office prior to use. Please report any damage to the office prior to use.

Please check that all safety mechanisms are intact and working correctly

Please make sure that the floor you're about to prep is clear and has no foreign objects that could cause damage to the machine or operator. This must be completed every time before you start to use the machine.

Please check every new day that all belts, bearings and moving parts are all in good condition as this could lead to something breaking and causing an injury.

USING THE MACHINE

Make sure the machine is unplugged. To fit the accessory, with the Hilti drill you insert it straight in and pull the collar back to remove. With the Makita you have to twist the chuck.

Plug the machine in and return upright. Use the switch on the handle or back of the machine to operate the machine.

Be careful with the surrounding area as concrete can chip and fly away.

To stop the machine let go of the trigger switch or switch off at the back.

AFTER USAGE AND RETURNING THE MACHINE

Please ensure that the machine is unplugged and kept in a safe place.

An off-hire will never be arranged at the beginning of the hire period. Please call the office and arrange collection as soon as you know when the machine/machines will not be in use.

Please make sure the machine is returned in a fit and clean state to avoid charges.

If multiple machines are being collected, please have them placed neatly together, ready to collect because time may be charged if we have to search or wait for equipment. Items not available for collection will remain on hire and additional collection charges will apply. If the machine is to be collected by a carrier, please ensure it is left somewhere obvious and preferably arrange for someone to be responsible for supervising the collection..

All information above is provided for guild line purposes only. For more accurate and reliable

Information please refer to the manufacturer.