

STR701

Weight(kg)	Height(mm)	Width(mm)	Length(m)	Hand arm vibration	Noise(db)
61	1250	470	580	2.5-5.6	64



EACH TIME BEFORE USING MACHINE

This machine should only ever be used by a trained and competent person.

Upon acceptance, please check the machine has in no way been damaged in transit and works, and each time prior to use. If you have any questions or doubts, please contact us, also in the event of breakdown or damage.

Please check that all safety mechanisms and switches are intact and working correctly.

Please make sure that the floor you're about to prep is clear of all foreign objects that could cause damage to the machine or operator. This must be completed every time before using the machine.

Please check every day that all bearings, belts and moving parts are in good condition because this could lead to breakage and even injury.

USING THE MACHINE

Firstly, connect the drive plate (head) to the machine by placing into the grooves and twisting it until it locks on. Next, lower the machine onto the floor so that the disc lines up to the head.

To lower the handle, twist the foot pedal anti-clockwise, then lower the handle to desired position. To lock twist the foot pedal clockwise.

To start the machine press in both trigger switches. Use the handle to control the direction of the machine. A little movement up and down causes the machine to move left and right.

AFTER USING AND PRIOR TO RETURNING THE MACHINE

Please ensure that the machine is unplugged and kept in a safe place.

An off-hire will never be arranged at the beginning of the hire period. Please call the office and arrange collection as soon as you know when the machine/machines will no longer be required.

Please make sure the machine is returned in a fit and clean state to avoid charges.

If multiple machines are being collected, please have them placed neatly together, ready to collect because time may be charged if we have to search or wait for equipment. Items not available for collection will remain on hire and additional collection charges will apply. If the machine is to be collected by a carrier, please ensure it's strapped securely to the pallet using the straps that it arrived with and is left somewhere obvious and preferably arrange for someone to be responsible for supervising the collection.

All information above is provided for guideline purposes only. For more accurate and reliable information please refer to the manufacturer.

Multi-hire power Tools

Warrington

www.multi-hire.co.uk

01925653633